

Parts Book

Ride-On Mower



LYNX
Series I & II

LEOPARD
Series II

PRE-DELIVERY CHECK

Tractor Model No. _____

Tractor S/No.....

Purchasers Name.....

Dealers Name.....

Pre-Delivery Date..... **Dealers Signature**.....

- 1 LUBRICATION
 - Grease all grease points
 - Check engine oil level
 - Check fuel level

3 FINAL INSPECTION

Paintwork
Tools and engine handbook
Operators Manual

2 GENERAL CHECKS

- Clutch adjustment
- Brake adjustment
- Steering adjustment
- Battery electrolyte level
- Idle speed
- Top speed
- Belt tensioners
- Tyre pressures
- Check all bolts etc for tightness
- Operation of choke throttle
- Stop control
- Cutter belt tension

DELIVERY AND DEMONSTRATION GUIDE

When you receive your new Lawn Tractor ensure your dealer has carefully explained the following points -

1. Starting procedure
 2. Foot pedal and hand brake operation
 3. Operation of all controls -
 - key starter
 - throttle
 - foot pedals
 - hand brake
 - mower engagement switch or lever
(which ever is fitted)
 - steering
 - micro switch functions
 4. Use of the discharge flap
 5. Mowing speeds and mower heights
 6. Belt tensioning
 7. Location of engine and tractor serial nos
 8. Regular maintenance procedures
 - Air filter
 - Oil Drain and level points
 - Fuel filters
 - Greasing points

WARRANTY POLICY

PRODUCT.....SERIAL NO.....

PURCHASER.....DEALER.....

DATE PURCHASED.....

Your KINGCAT machine has been carefully assembled and tested before leaving our factory. However, due to circumstances beyond our control, and the human elements (everybody makes mistakes sometimes), we occasionally have a problem which is our fault. We have therefore guaranteed that for a period of 12 months (commercial use 90 days) from the date that you (the first owner) take delivery of this machine, it will give you trouble free service. This warranty covers all parts and labour necessary to bring your machine up to original condition should the problem be caused by either a faulty part or workmanship.

To be fair, however, we DO NOT guarantee things over which we do not have control. Generally these are:

Normal wear and tear, neglect, accident, misuse, non-compliance with operating instructions, unauthorised installation, alteration or modification, unauthorised repairs, substitution of parts or the fitting and use of any attachment which is not recommended.

The warranty will be null and void if :

1. We don't receive the warranty/installation certificate signed by the owner within 14 days of purchase/delivery.
2. The machine is put to some use for which it was not designed.
3. Warranty claims are not advised immediately.

We do not agree to cover the purchaser for any losses or damage which occur as a result of any breakdown. We reserve the right to make changes to our machines without bringing any existing machines up to the same specification.

Any warranty work must be carried out by our authorised dealers who must comply with warranty procedure.



OPERATOR MAINTENANCE

**CHECK THE FOLLOWING EVERY DAY
OR EVERY EIGHT HOURS OF MOWING.**

Engine Oil Level -	Remove dipstick and ensure level is correct. If necessary top up with the grade of oil specified in your engine hand book.
Engine Air Filter -	Refer engine handbook.
Belt Tensions -	Refer adjustments.
Battery Level -	Between Max – Min indicators.
Tyre Pressures -	Front 18 p.s.i. Maximum Rear 14 p.s.i. Maximum (20" Tyres) 10 p.s.i. Maximum (22" Tyres) 18 p.s.i. Maximum (18" Tyres)

Grease the following points when finishing mowing. This will ensure any moisture which may have seeped past seals while moving will be dispelled.

King pins (on front axle assembly) 2 grease nipples.

Mower deck – 3 grease nipples, Leopard

2 grease nipples, Lynx

ADJUSTMENTS

This operation is best carried out on a level concrete surface.

TO TIGHTEN MOWER BELT

A drop arm is mounted on either side of the chassis underneath the rear of the engine.

Adjuster rods are attached to these arms by way of a threaded rod and locking nuts.

Drop the cutting deck to it's lowest height and loosen off the front locking nuts.

Tighten the locking nuts evenly on both sides, until the tension achieved is sufficient to eliminate slipping of the belt when you recommence mowing.

IMPORTANT

CLEANING YOUR NEW MOWER

Ensure the underside of the mower deck, grass chute
And catcher bag are hosed clean after EACH use.

This will prevent grass build up and enable your new
Mower to perform at its best EVERY TIME.

Always run the Tractor and Mower after washing to
Remove any excess water from the pulleys and belts.

INTRODUCTION

Thank you for choosing a new KINGCAT Machine. It has been carefully designed and manufactured under strict quality controls. We are proud of our reputation as a manufacturer of quality machines. However, in order for you to be totally satisfied, it is important that you read this manual before you commence operation.

Your KINGCAT dealer is competent to advise you on the correct methods of safe operation and routine maintenance, and should explain these to you on delivery.

Once you have accepted delivery and become familiar with the operation , it is important that you fill out the warranty form. This must be done **WITHIN 14 DAYS** of taking delivery and returned to or factory :-

COX INDUSTRIES
P.O. BOX 6266DC
ACACIA RIDGE
QUEENSLAND 4110
AUSTRALIA

RURAL PACIFIC MARKETING (NZ) LTD
P.O.BOX 185
KATIKATI
NEW ZEALAND

This is important, to ensure that your warranty becomes validated.

SAFETY

KINGCAT equipment is provided with many safeguards, but statistics prove that most accidents result from operator negligence. To prevent accidents, read the following information carefully BEFORE operating your new machine. Should you have further questions, do not hesitate to ask your KINGCAT dealer.

1. Always disengage mower unit and wait for blades to stop turning before dismounting from tractor.
2. Ensure handbrake is on and mower is disengaged before attempting to start.
3. Never make any adjustments without stopping the engine. If making motor adjustments, wait for it to cool down.
4. Keep other people and animals well clear while operating.
5. Do not operate machine which is not correctly adjusted or is overdue for servicing.
6. It is dangerous to operate the engine in confined areas.
7. Wait for the engine to cool down before refuelling.
8. Never smoke or expose a naked flame near the engine especially when refuelling.

NEVER CARRY CHILDREN ON THE TRACTOR



OPERATING INSTRUCTIONS

STARTING: (NB: Please observe all safety procedures listed on your Kingcat lawn tractor dash panel prior to starting engine)

1. Manual models : Ensure gear lever is in the neutral position.
Hydrostatic models : Ensure the foot pedal is in the neutral position.
2. Ensure mower is in the up position.
3. Make sure mower is disengaged.
4. Keep all bystanders well clear and make sure you are comfortably seated.
5. Shift throttle lever to choke position or pull choke knob out (16hp).
6. Turn key to start engine, once engine has started back off throttle lever from the choke position or push choke knob in (16hp).

MOVING OFF: MANUAL MODELS

1. Shift throttle lever to required position for correct engine speed (for mowing full engine revs).
2. Depress foot pedal and select required gear.
3. Gently release foot pedal until tractor moves off.
4. To change gear, depress foot pedal and change gear when the tractor is stationary.

STOPPING:

1. Depress clutch pedal, apply foot brake and stop. (Lynx series I & Leopard)
Depress clutch/brake pedal and stop. (Lynx series II)
2. Reduce engine revs and apply handbrake.
3. To stop engine simply shift the throttle to idle position and turn the key to off position.

MOVING OFF: HYDROSTATIC MODELS

1. Shift throttle lever to required position for correct engine speed. Note: For mowing use full engine revs)
2. Gently move the foot pedal in the direction of the required travel (i.e. forward to travel forward) the further the pedal is moved , the faster the tractor will travel.

STOPPING:

1. To slow down and stop, simply bring the pedal back to the neutral position.

Note : It may be necessary to apply light pedal pressure in the opposite direction of travel to slow down while negotiating slopes or in the event of an emergency stop.

ENGAGING MOWER:

1. Start engine (see above)
2. Set throttle control to half revs and have mower set at full height.
3. Flick blade engagement switch to "on" position.
4. Indicator light will glow when blades are engaged.
5. Once mower has reached operating speed set height to required position.
6. To disengage the mower, reverse the above procedure.

MOWING: As mowing conditions vary greatly, it is important that you take special note of this section.

Your mowing attachment has been designed to cope with a large range of grass Types, conditions, lengths and mowing speeds. Always use high engine revs when mowing and regulate your speed with one of the five forward gears (manual) or adjust your speed with the foot pedal (hydrostatic). As a rule, if you have rough ground, long grass, tough grasses (eg rye grass, kikuyu etc...) or if your grass is wet, it is best to reduce speed. Select a reasonably high cutting height – and if necessary take two cuts, the first one high and the next one lower. Your Kingcat dealer is qualified to advise you on how you should be operating your machine – if in doubt ASK.

Note: Remember to always depress the clutch fully when changing gears.

SPECIFICATIONS


LYNX REAR DISCHARGE CATCHER & LEOPARD SIDE DISCHARGE

ENGINE:	Briggs & Stratton "Diamond"	Briggs & Stratton "Vanguard"
Horsepower	13HP	16HP, 18HP & 20HP
Cylinders	1	2
Cycle	4	4
Cooling	Air	Air
MAXIMUM SPEED		
Lynx Series I	14 KPH	
Lynx Series II	9 KPH	
Leopard Hydrogear	10 KPH	
Leopard Manual	14 KPH	
TYRES:		PRESSURES
Front	15 x 600 x 6	18psi
Rear	18 x 950 x 8	18psi
	20 x 10 x 8	14psi
	22 x 11 x 8	10psi
FUEL & LUBRICATION:		
Fuel	Unleaded	Unleaded
Fuel Tank Capacity	7 Litres	7 Litres
Engine Oil	SAE 30	SAE 30
Engine Oil Capacity	1.4 Litres	1.7 Litres – Spin-on filter
ELECTRICAL SYSTEM:		
Battery	1 x 12 Volt	
Switch	Key with starter interlock	
Ignition	Solid state	
Lights	Twin headlights	
TRANSMISSION:		
Gears	Peerless 700 Series – Lynx	
Hydrostatic	Peerless 800 Series – Leopard	
Differential	Peerless MST Series – Leopard	
	5 Forward, 1 Reverse	
	Peerless VST & Hydrogear	
	Peerless HD 100 x 1" axle – Lynx	
CHASSIS:	Full Chassis – Angle iron & box section	
CONTROLS:		
Height Adjuster	Right hand side	
Blade Engage	Right dashboard	
Gear Lever	Right hand side – Lynx	Left hand side – Leopard
Brake Pedal	Right foot – Lynx I & Leopard	(manual model Leopard)
Clutch Pedal	Left foot – Lynx I & Leopard	(manual model Leopard)
Break/ Clutch Pedal	Right foot - Lynx series II	
Park Brake	Right hand side	
Control Pedal	Right foot – leopard Hydrostatic	
TURNING CIRCLE:	470mm Radius	
MOWER DECK:	1040mm Twin – Lynx	Counter rotating blade
	900mm Twin – Leopard	Side discharge
	1100mm Twin – Leopard	Side Discharge
GRASS CATCHER:		
Capacity	177 Litres – Lynx	E & O. E.

KINGCAT LYNX SERIES I & II LEOPARD SERIES II



16HP Manual - Lynx

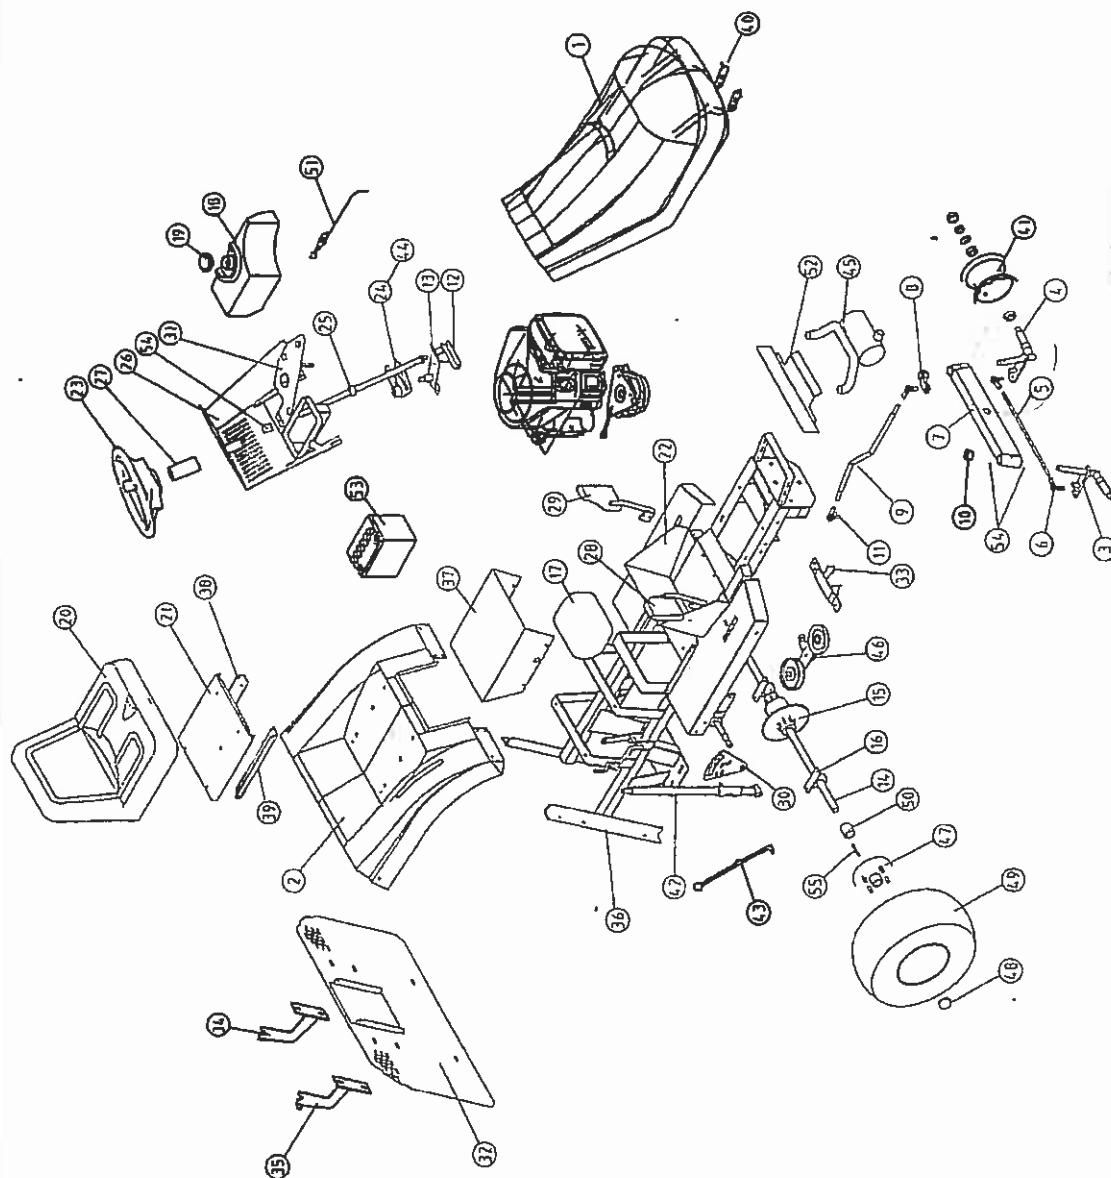

20/03/00

Section 8 Page 40

LYNX & LEOPARD PARTS LIST

1	502251	Bonnet – Sub Assy Complete – High Console	502161	Console – Steering – High – Leopard
	500430	Bonnet – Bare – Leopard Low Console	500424	Console – Steering – Low – Leopard
	502223	Decal Bonnet LH	502181	Shroud – Console – Lynx
	502224	Decal Bonnet Front	27	
	502272	Decal Bonnet RH	28	Brake Pedal – Sub Assy
	500432	Lens LH – High Console	29	Clutch Pedal – Sub Assy
	500431	Lens RH – High Console	30	Quadrant – Lift
	500432L	Lens LH – Low Console	31	Bracket – Tank Assy
	500431L	Lens RH – Low Console	32	Panel – Rear – Lynx
	500145	Bulb Head Light	33	Guide – Belt – Lynx
	500460	Grill – Bonnet Vent	34	Guide – Belt – Leopard – Manual
	500435	Hinge – Bonnet Series II	35	Guide – Belt – Leopard – Hydro
	502252	Rear Guard – Sub Assy Complete – Lynx	36	LH Pivot Assy – Catcher Mount – Lynx
	500210G	Rear Guard – Sub Assy Complete – Leopard Gear (add Decal – Lever – Gear Pt No 500561)	36	RH Pivot Assy – Catcher Mount – Lynx
2	500210H	Rear Guard – Sub Assy Complete – Leopard Hydro (add Decal – Lever – Hydro Pt No 500560)	37	Chassis – Lynx
	502331 – Fig 1	Stub Axle – RH (Long)	38	Chassis – Leopard – Manual
	502330 – Fig 1	Stub Axle – LH (Long)	39	Chassis – Leopard – Hydra
	751631 – Fig 1	Tie Rod	40	Transmission Cover – Lynx
	751631 – Fig 1	Rod End – 10mm	41	LH Mounting – Seat
	750347 – Fig 1	Beam Assy – Axle	750294	RH Mounting – Seat
	500045 – Fig 1	Arm Assy – Steering	750295	Plate – Assy Bonnet Mounting
	500094 – Fig 1	Link – Drag – Lynx	750298	Wheel Assy – 15 x 600 x 6 25mm
	502096 – Fig 2	Link – Drag – Leopard	500052 – Fig 8	Rim 6"
	500301 – Fig 2	Collar – Shaft 3/4"	500161 – Fig 8	Tyre 15 x 600 x 6
	500266 – Fig 1	Rod End – 12mm	500528 – Fig 8	Tube 15 x 600 x 6
	500300 – Fig 2 & 3	Steering Box Assy (Leopard II & Lynx Series II)	500197 – Fig 8	Lever – Lift MKII
	500457 – Fig 3	Quadrant – Steering	500181 – Fig 8	Plunger Assy – Lift Lever
	500297 – Fig 3	Differential – 100-121 – Refer Supplier	502322 – Fig 8	Pin – Index MK2 Lift Lever
	502076	Sprocket – 45T ASA40	43	Grip – Lift Lever
	758103	Sprocket 60T – Lynx	44	Spacer – Lift Lever
	502414	Bearing – Rear Axle – Lynx	45	Spring
	502090	Housing – Bearing – Lynx	46	Lever – Handbrake Assy
	502089	Gearbox – Refer Supplier – All Models	502242	Electric Clutch – Sub Assy
	17	Tank – Fuel	502248	Muffler
	502204 – Fig 5	Tank – Under Seat – Leopard	500233	Clutch Arm
	751917	Brass Fitting 202 x 4 x 2	502394 – Fig 9	Idler Pulley F2000-0625
	500374 – Fig 5	Solvent Tube 6.4mm	500304 – Fig 9	Idler Pulley V4480-4B14
	750460 – Fig 5	Cap – Fuel Tank – Suit Tank 502204 & Tank 751917	850117 – Fig 9	Belt Guide
	493988 – Fig 5	Seal – High Back	500058 – Fig 9	Spacer – Clutch Pulley CH2
	750768	Plate – Seat – Lynx	752099 – Fig 9	Washer – Clutch Arm
	21	Plate – Seal – Leopard	502395 – Fig 9	Wheel Hub – Lynx
	500169	Lynx Pedestal – Sub Assy	502104	Wheel Hub – Leopard
	500169	Steering Wheel – Lynx	7502078	Hub Cap
	502264	Steering Wheel – Leopard	750498	Wheel Assy – 20 x 10 x 8 – 4 Slud – Lynx & Leopard Manual
	502079	Shaft – Steering – Lynx	500308	Rim 8" – 4 Slud
	750766	Shaft – Steering – Leopard	500138	Tyre 20 x 10 x 8
	502145	Shaft – Steering – Lynx	500608	Wheel Assy 18-950 x 8 – 4 Slud – Leopard Hydro
	500423	Shaft – Steering – Leopard	500359	Tyre 18-950 x 8
	500266	Collar – Shaft 3/4"	750301	Tube 18-950 x 8
	502161	Console – Steering – Lynx	502111	Hub Spacer – Lynx
	26		500451	Hub Spacer – Leopard – Manual
			500553	Hub Spacer – Leopard – Hydro

Heavy between pulley & clutch

YNX & LEOPARD PARTS | LIST CONTINUED

PARTS LIST CONTINUED	
51	Throttle Control Assy - Universal
52	Heat Deflector - 16hp - Lynx
	Heat Deflector - 16hp - Leopard
53	Battery - 12N24-4
54	Bush - Black $5\frac{1}{2}$ " x 1" x 1 3/8"
55	Key - Rear Wheel - Lynx
	Key - Rear Wheel - Leopard
<u>PARTS NOT ILLUSTRATED</u>	
500216	Fig 4
502286	Heat Deflector - 16hp - Lynx
500578	Heat Deflector - 16hp - Leopard
AM109	- Fig 4
500321	M/switch 24813 S4-030D Lång (Seat)
502122	Ignition Key
750613	Spring - Compression Seat
	Spring - Brake/Clutch Return
	Spring - Handbrake Return
	Spring - Pan Return
	Spring - Lift Lever
850192	Knob - 3/8" x 1 1/4" BSW Black (Handbrake)
750237	Knob - 1 1/4" x 3/8" BSW Black (Gear lever)
750169	M/switch 24813 S4-030D Lång (Seat)
750273	Spring - Lift Lever
750770	Key - 1/2" x 1/2" x 40mm Long (Engine pulley)
750387	Links - Lift Chain RC40-11 - Lynx
750388	Link - Hd/Duty (Drive chain) - Lynx
750583	V Belt - BBB89 (PTO) - Lynx
502322	V Belt - PTO to suit 3 Roller Deck - Leopard
750432	V Belt - PTO to suit 4 Roller Deck - Leopard
502425	Sleeve - Flat Bosch TB317CS
502103	Ring Terminal
500375	Terminal - Bosch TB3217Cs
500484	Lead - Negative Earth (Battery)
750544	Loom - Extension - Lynx
750362	Loom - Extension - Leopard - Manual
750402	Loom - Extension - Leopard - Hydro
500063	Clamp - Cable H909/150
502073	Spacer - Seat
500059D	Cap - Seat Spring
500468	Chain Adjuster Sub Assy - Lynx
750328	Decal - Instrument Panel
751170	Velcro - Self Adhesive Bonnet Catch - Loop
502339	Velcro - Self Adhesive Bonnet Catch - Hook
750545	Light Wiring Assy - Bonnet
	Chain - Lift - Lynx
	Chain - Drive (Heavy) - Lynx I
	Chain - Drive (Standard) - Lynx I
	Adjuster - R/Axle Double - Lynx
502221	Adjuster - R/Axle Single - Lynx
502233	Mat - Foot LH - Lynx I - with Separate Clutch
502234	Mat - Foot LH - Lynx II - With no Pedal
502267	Mat - Foot RH - Lynx I & II
502068	Mat - Pedal RH - Lynx I & II
502388	Pulley - Engine - Manual Leopard & Lynx
502069	Pulley - Engine - Manual Leopard & Lynx
502415	Decal - Guard Rear LH - Lynx
502194	Decal - Guard Rear RH - Lynx
502195	Decal - Park-Drive (3/8" Diameter)
502177	Decal - Handbrake (1/4" Diameter)
502417	Decal - Hydrostatic - Leopard
502178	Decal - Guard Rear LH - Lynx
502182	Decal - Gear Indicator - Lynx
500498	Decal - Gear Indicator - Lynx
500443	Decal - Gear Indicator Leopard Manual
502228	Decal - Gear Indicator - Lynx
502229	Decal - Gear Indicator - Lynx
500128	Decal - Gear Indicator - Lynx
500129	Decal - Gear Indicator - Lynx
500443	Decal - Gear Indicator Leopard Manual
502222	Decal - Gear Indicator - Lynx
502059	Decal - Gear Indicator - Lynx
500608	Decal - Gear Indicator - Lynx
500607	Decal - Gear Indicator - Lynx
758039	Decal - Gear Indicator - Lynx
500560	Decal - Gear Indicator - Lynx
500561	Decal - Gear Indicator - Lynx
500467	Decal - Cat Kingcat
500312	Decal - Vanguard (Ex B & S)
500484	Decal - Rear Guard - Kit - Leopard
500114	Pipe - Oil Drain
751186	Plug - Oil Drain
500373	Restraint - Bumper
502183	Grommet - Brake Adjustment - Lynx
502091	Pan adjuster - Bolt - Lynx
500200	Spacer - Quadrant - Lynx
500200	Spacer - Quadrant - Leopard
500151	Pan Adjuster - Bolt - Leopard
500459	Wear Plate - Leopard
500196	Toggle - Pan lift Tie Rod - Leopard
500053	Tie Rod - Pan lift - Leopard
500411	Bracket - brake Rod - Leopard
500469	Stiffener - Rear Cowl - Front off - Leopard
750609	Washer - engines - Leopard
500215	Mat - Foot - Manual - Leopard
500445	Mat - Foot - Hydro - Leopard
502183	Mat - Pedal - RH - Leopard
502182	Mat - Pedal - LH - Manual - Leopard
750389	Spring - Brake Rod - Leopard
750193	Circlip - Rear Axle - Leopard
750200	Pin - Steering - Leopard
<u>13HP SPARES</u>	
502227	Decal 13HP
500313	Insulation - Heat (13HP)
502270	Sub Assy Lynx 13HP Fuel Line
502060	Bracket - Tank Assy 13HP - Lynx

Section 8 Page 42

20/03/00


LYNX & LEOPARD PARTS LIST CONTINUED

HARDWARE

750772	Screw - Slot 1/8" x 3/4" MT zp (Micro Switch)	2
750111	Screw - Set Hex M6 x 12 zp	7
750112	Screw - Set M6 x 16 zp	2
750113	Screw - Set Hex M6 x 20 zp	6
502124	Screw - Button Head M8 x 16 zp (G- Box Cover and Guard)	4
750181	Screw - Set Hex M8 x 16 zp	16
750116	Screw - Set M8 x 20 M/S zp	2
750139	Screw - Set M10 x 35 M/S zp	6
502070	Screw - Set Hex M10 x 16 M/S zp	2
750166	Screw - Set Hex M12 x 20 M/S zp (Chain Adjuster)	4
758013	Screw - Set 5/16" x 1" UNC HT zp (Gear Box Mount)	4
750121	Bolt - Hex M8 x 40 HT zp (Engine Mount)	1
500244	Bolt - M18 x 75 M/S zp (Axle Pivot)	2
750771	Nut - Hex 1/8" MT zp (Micro Switch)	2
750109	Nut - Hex 1/4" NC zp (Brake Conlink)	1
750133	Nut - Nyloc 1/4" UNC zp (Brake Conlink)	7
750101	Nut - Nyloc M6 zp	4
750188	Nut - Hex M6 HT zp	2
750129	Nut - Hex M8 zp	39
750102	Nut - Nyloc M8 zp	8
750393	Nut - Wheel 7/16" NF	5
750105	Nut - Hex M10 Mach zp	10
750127	Nut - Nyloc M10 zp	3
750128	Nut - Nyloc M16 zp (Steering Box & Stub Axles)	1
758153	Nut - Nyloc M16 x 1.5 zp (Lift Lever)	1
750160	Washer - Flat 1/4" x 5/8" zp	2
850121	Washer - Flat 5/8" x 1 3/8" zp (S-Box & StubAxles)	34
750156	Washer - Flat M8 x 21 zp	2
750157	Washer - Spring M8 zp	9
750153	Washer - Flat M10 x 21 zp	2
750154	Washer - Flat 1/2" x 1" zp	2
758164	Washer - Starloc 3/8" Plain (Gear Lever Link)	2
750203	Washer - Starloc 1/4" zp (Break Con Link)	1
750199	Washer - Starloc 5/16" Plain Int	2
754116	Circlip - 25mm Ext (Rear Axle)	1
750197	Switch - Gear Box Neutral	1
750200	Pin - Steering Wheel	9
750134	Nut - Nyloc 5/16"unc (Seat Mounting)	1
850505	Socket - Cap M6 x 16 Black (Steering Column)	1
750609	Washer - Engine	1

FIG 1

FRONT AXLE ASSY

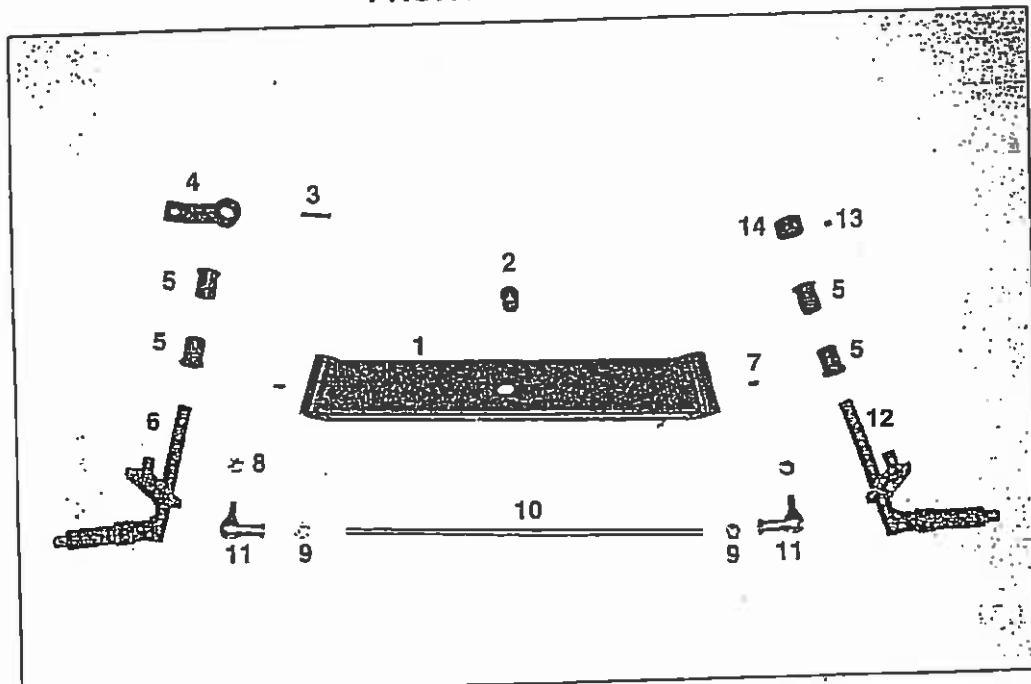


FRONT AXLE ASSEMBLY


1. 500045 BEAM AXLE
2. 500142 BUSH
3. 750249 PIN TENSION
4. 500094 ARM STEERING
5. 500321 BUSH
6. 502330 STUB AXLE L.H.
7. 750219 NIPPLE GREASE
8. 750394 NUT NYLOC
9. 750189 NUT
10. 751631 TIE ROD
11. 750347 ROD END
12. 502331 STUB AXLE R.H.
13. 750103 SCREW GUB
14. 500266 COLLAR

20/03/00

CLUTCH LINKAGE FIG 6 3 3 4 5 6 7 8

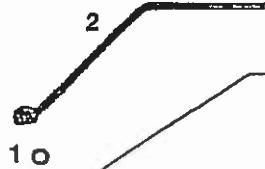

BRAKE LINKAGE FIG 7

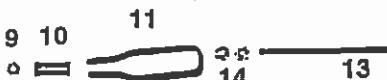

LIFT LEVER ASSY FIG 8



502390	UPGRADE KIT
1.	750199 WASHER LOCK
2.	502135 LINK CLUTCH LYNX
	500057 LINK CLUTCH LEOPARD
3.	750129 NUT
4.	500489 WASHER BALL
5.	500488 SLEEVE
6.	502411 SPRING
7.	500501 WASHER CUP
8.	750102 NUT NYLOC

BRAKE LINKAGE

9.	750133 NUT NYLOC
10.	750389 SPRING
11.	750512 CLEVIS
12.	750203 WASHER-LOCK
13.	502067 LINK LYNX
	500056 ROD BRAKE LEOPARD
14.	750109 NUT


LIFT LEVER ASSEMBLY

15.	500181M PLUNGER MODIFIED
16.	502322 SPRING
17.	500181 SPACER
18.	500528 PIN-INDEX MODIFIED
19.	500502 LEVER-LIFT
20.	500187 GRIP

CLUTCH ARM ASSEMBLY

1.	502189 V BELT LYNX UP TO SERIAL 597030
	502333 V BELT LYNX FROM SERIAL 597031
2.	500183 V BELT LEOPARD MANUAL
	500454 V BELT LEOPARD HYDRO
2.	750135 NUT NYLOC
3.	750387 SPRING LYNX
	750386 SPRING LEOPARD HYDRO
	750387 SPRING LEOPARD MANUAL
4.	752099 SPACER
5.	850117 PULLEY
6.	750153 WASHER
7.	500495 BOLT
8.	500304 PULLEY
9.	502394M ARM CLUTCH LYNX
	500089 ARM CLUTCH LEOPARD
10.	750179M BOLT LYNX
	750735 BOLT LEOPARD
11.	500058 GUIDE BELT
12.	502396M SHAFT
13.	502395M WASHER LYNX
	500490 WASHER LEOPARD
14.	750127M NUT NYLOC
	502398 UPGRADE KIT - includes all numbers with suffix M


ILLUSTRATION DEPICTS LYNX ASSEMBLY

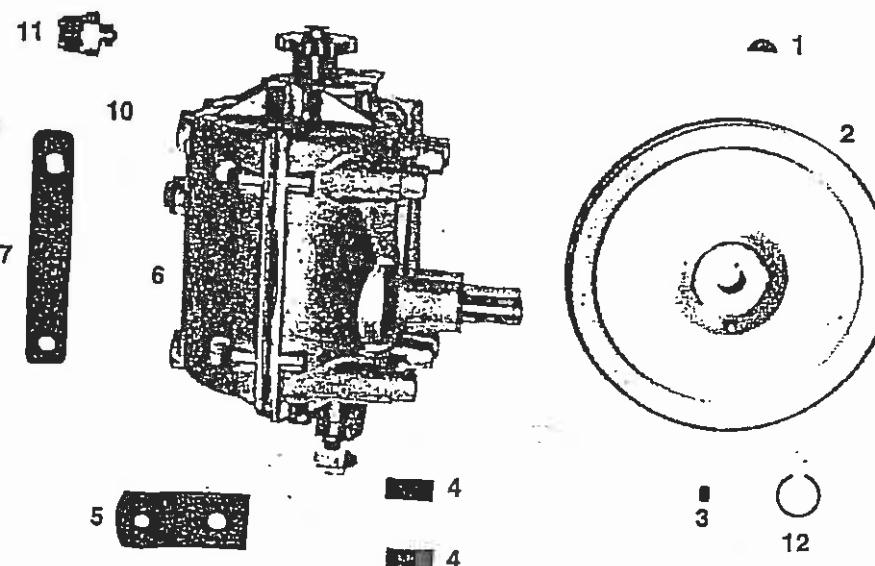

GEAR BOX ASSEMBLY

1.	750405 KEY WOODRUFF
2.	850087 PULLEY INPUT 185mm LYNX UP TO SERIAL NO. 0597031
	502329 PULLEY INPUT 150mm LYNX FROM SERIAL NO. 0597031
500217	PULLEY TRANSAKLE LEOPARD
3.	750103 SCREW GRUB
4.	502341 BRAKE PAD HEAVY DUTY
5.	502279 BRAKE LEVER SHORT LYNX
6.	GEAR BOX REFER SUPPLIER
7.	500054B ARM SELECTOR LYNX
	500054 ARM SELECTOR LEOPARD MANUAL
8.	750092 WASHER
9.	750177 SET SCREW
10.	750413 WASHER HARDENED
11.	750197 SWITCH NEUTRAL
12.	570207 CIRCLIP


Deck Assy - Leopard-Model 900 & 1100

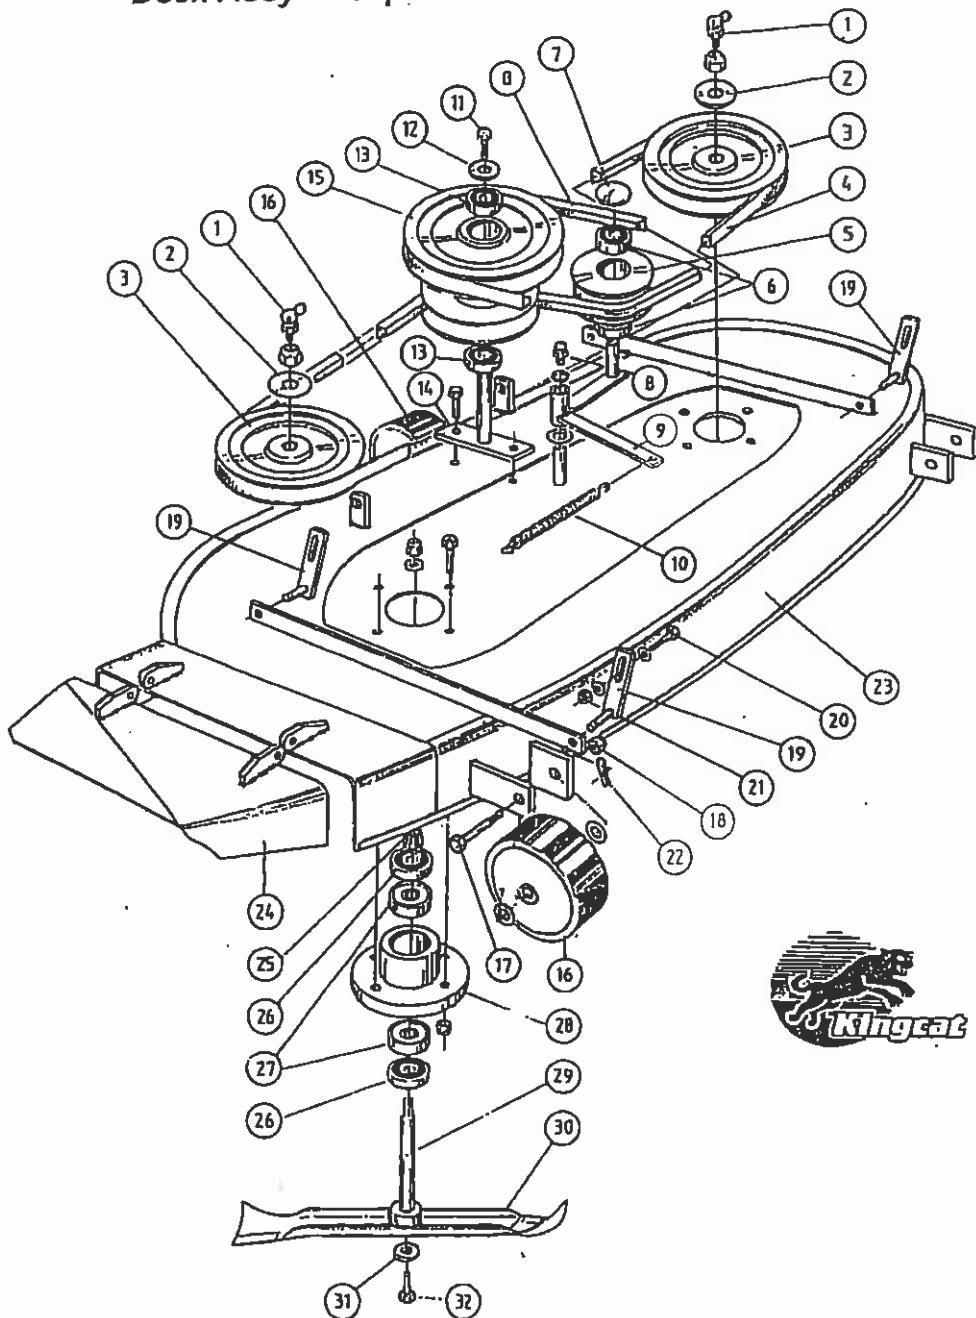


20/03/00

Section 8 Page 46

STEERING DRAG LINE ASSEMBLY FIG 2

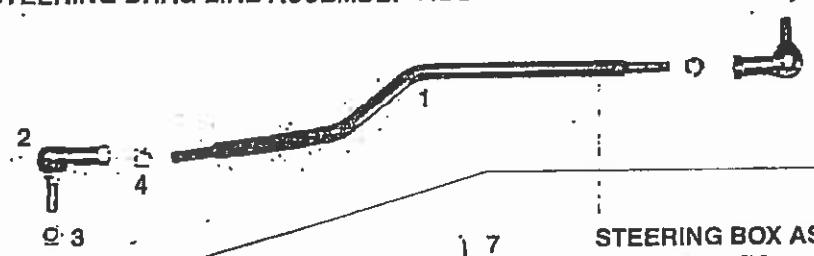


STEERING BOX ASSEMBLY
FIG 3

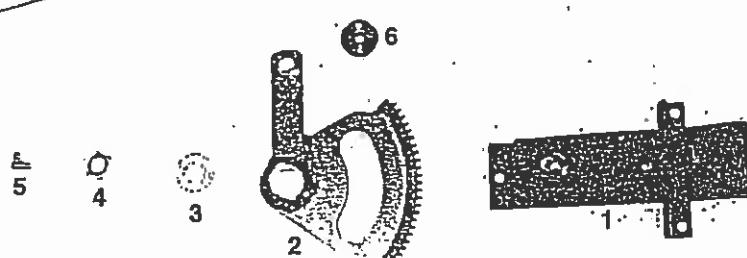


CONSOLE PARTS

1. AM109 BATTERY
2. 500059C LOOM LYNX & LEOPARD
500468 LOOM LEOPARD HYDRO
3. 500065 LEAD POSITIVE LONG
4. AM159 SOLENOID
5. 500064 LEAD POSITIVE SHORT
6. 750280 SWITCH IGNITION
7. 500146 LAMP WARNING
8. 500148 SWITCH
9. 500061A WIRE FUSE
10. 750408 CABLE CHOKE (NOT 13H)
11. 500144 GAUGE AMMETER
12. 500216 CONTROL ASSY THROTTLE

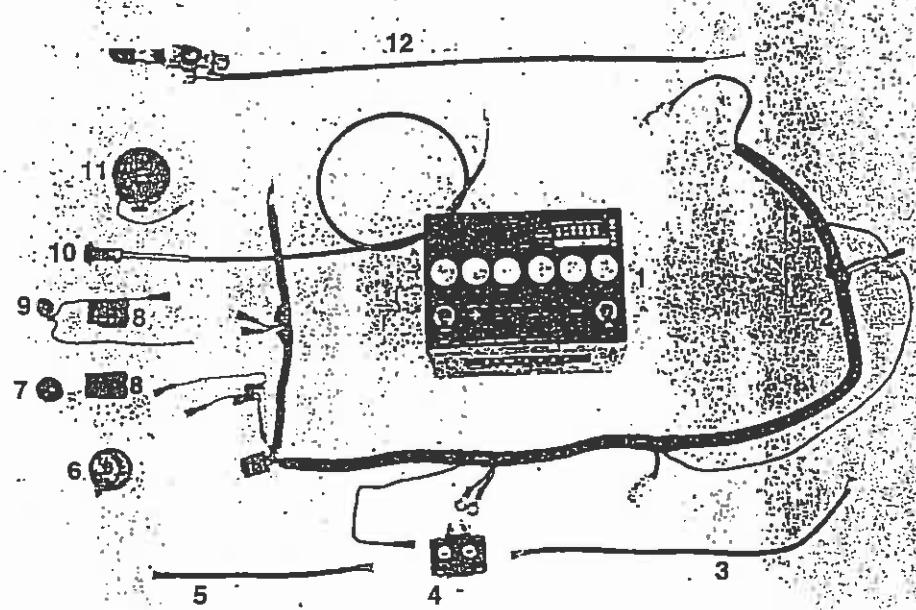

FUEL TANK ASSEMBLY

1. 502056 BRACKET TANK 16HP
502060 BRACKET TANK 13HP
2. 500374 FITTING BRASS 90°
3. 750331 CLIP HOSE
4. 750480 HOSE FUEL
502270 HOSE FUEL 13HP
5. 502082 SCREW
6. 750145 WASHER
7. 493988 CAP FUEL
8. 502204 TANK

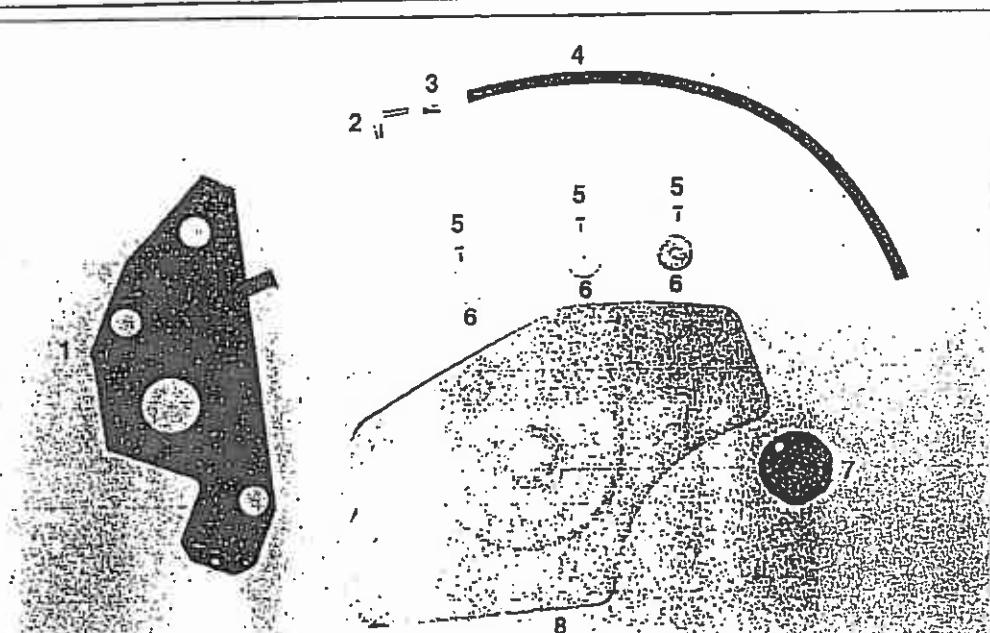

20/03/00


PARTS LIST - DECK ASSY - MODEL 900 & 1100

1	750216	Nipple - Grease	
2	500176	Washer - Spindle	
3	850137	Pulley - Spindle	
4	750401	V Belt - Model 900	
	500327	V Belt - Model 1100	
5	500303	Jockey - Pulley - NLA use PIFBB02 & 500609	
	PIFBB02	Jockey - Pulley	
	500609	Adapter - Pulley Bush	
6	750242	Bearing - Idler Pulley - Early Models	
7	750382	Plug - Expansion - Early Models	
8	500375	V Belt - P.T.O. Belt - 3 Roller Deck	
	500494	V Belt - P.T.O. Belt - 4 Roller Deck	
9	500095	Arm - Tension	
10	750385	Spring - Tension Arm - Model 900 - Qty 1	
	750385	Spring - Tension Arm - Model 1100 - Qty 2	
11	750266	Screw - Set M10 x 30 HT	
12	750609	Washer	
13	750337	Bearing - Ball	
14	500191	Shaft Assy - Double Idler	
15	500115	Pulley Assy - Double Idler	
16	005478	End Cap - 70mm - 3 Roller Deck	
	500260	Tube - Roller - 70mm - 3 Roller Deck	
	500261	Axle - Roller - 70mm - 3 Roller Deck	
	502146	End Cap - 90mm - 4 Roller Deck	
	502095	Tube - Roller - 90mm - 4 Roller Deck	
	502164	Axle - Roller - 90mm - 4 Roller Deck	
17	500257	Bolt - M10 x 110 - 3 Roller Deck	
	502143	Bolt - M10 x 120 - 4 Roller Deck	
18	750127	Nut - Nyloc M10	
19	500127	Lug Assy - Pan Lift	
20	750139	Screw - Set M10 x 35	
21	750127	Nut - Nyloc - M10	
22	750324	Clip - "R"	
23	500610	Deck - Model 900 - 4 Roller Deck	
	500218	Deck - Model 900 - 3 Roller Deck	
	500611	Deck - Model 1100 - 4 Roller Deck	
	500284	Deck - Model 1100 - 3 Roller deck	
24	500233	Flap Assy - Model 900	
	500289	Flap Assy - Model 1100	
25	500111	Bush - Taper	
26	750282	Seal - Spindle	
27	750338	Bearing	
28	500099	Housing - Spindle	
29	500323	Spindle Assy	
30	911181	Blade 18" - Model 900	
	912144	Blade 21" - Model 1100	
	500325	Blade - Heavy Duty - Model 900	
	500326	Blade - Heavy Duty - Model 1100	
31	500106	Washer - Blade	
32	500324	Blade - Bolt	
	750303	Decal - Caution	
	750128	Nut - Nyloc M16 - Spindle Assy - Early Model	
	758153	Nut - Nyloc - Spindle Assy - Late Model	
	751211	Washer Tapered - Early model	
	750241	Bush - Tension Arm	
	750207	Circlip - Tension Arm	
	500175	Spacer - Spindle	
	850086	Spacer - Blade - Spindle Bearings	
	500241	Spacer - Double Idler	
	751076	Spacer - Jockey Pulley - Early	
	500315	Mulch Plate - Model 900	
	500295	Mulch Plate - Model 1100	
	500151	Pan ADJUSTOR - (750130) (4 Roller Deck) ARM ASSY STABILIZR	
	580496	NO TURN UP FLAT ON ONE SIDE	
	500136	(3 Roller Deck) " " "	

20/03/00

LYNX PARTS LIST - DECK ASSY - RD1040


1	502285	90mm Roller Sub Assy
2	750338	Bearing 6205
3	750282	Seal 35-52-7
4	758116	Spacer - Bearing
4	754148	Housing - Spindle
5	502286	Idler Pulley Sub Assy
5	850509	Pulley - Spindle 660
6	502086	LH Blade - Lynx
7	502202	RH Blade - Lynx
8	502236	LH Bell Cover
9	502112	Cutter Deck
10	502154	Stabilizer
11	502201	Chute Assy
12	502109	Spacer - Spindle
13	750153	Nut - Nyloc M16 x 1.5 zp
14	500176	Washer - Spindle Pulley
15	750217	Connector - Male 68 x 1/4" x 1/8"
16	502188	Tube - Grease 145mm
17	502240	Nipple - Grease 1/8" x 45 BSP
18	502163	Spindle Assy
19	750219	Nipple - Grease M6 x 1 Straight
20		
21		
PARTS NOT ILLUSTRATED		
4	750324	Clip - Grip AG5 (2mm)
4	750320	Links - Lift Chain RC40-11
2	750383	Spring - Pan Return
2		Bush - Taper
2		Adjuster - Pan
2	500127	Lug Assy - Pan Lift
2	502241	Hanger - Deck Front
1	502312	Deflector - Sub Assy
HARDWARE		
4	502108	Washer - Loc 5/8" External ZP (Pan Adjuster)
4	750209	Nut - Hex M16 zp (Pan Adjuster Bolt)
8	750119	Screw - Set M8 x 30 M/S zp (Spindle Housing)
1	502066	Screw - Csk A/Head M10 x 16 BL UNC(idl plly)
6	750286	Screw - Set M10 x 30 HT zp (Blade Bolts)
1	502125	Screw - Set M12 x 30 M/S zp (Con Arm Assy)
3	502072	Screw - Set M12 x 35 M/S zp (Con Arm Assy)
4	502143	Bolt - M10 x 120 M/S zp (Roller)
10	750160	Washer - Flat 5/8" x 5/8" zp (Belt Cover)
2	750145	Washer - Fender 1/4" x 1 1/4" zp (Chute Pivot)
8	750153	Washer - Flat M10 x 21 zp (Roller)
10	750101	Nut - Nyloc M6 zp (Belt Covers & Chute)
10	750102	Nut - Nyloc M8 zp (Spindle Housings)
8	750127	Nut - Nyloc M10 zp (Rollers & Blades)
4	750104	Nut - Nyloc M12 zp (Connecting Arm Assy)
10	750112	Screw - Set M6 x 16 zp (Bell Covers & Chute)
2	750303	Decal - Caution
1	751149	Washer - Csk (Idler Pulley)

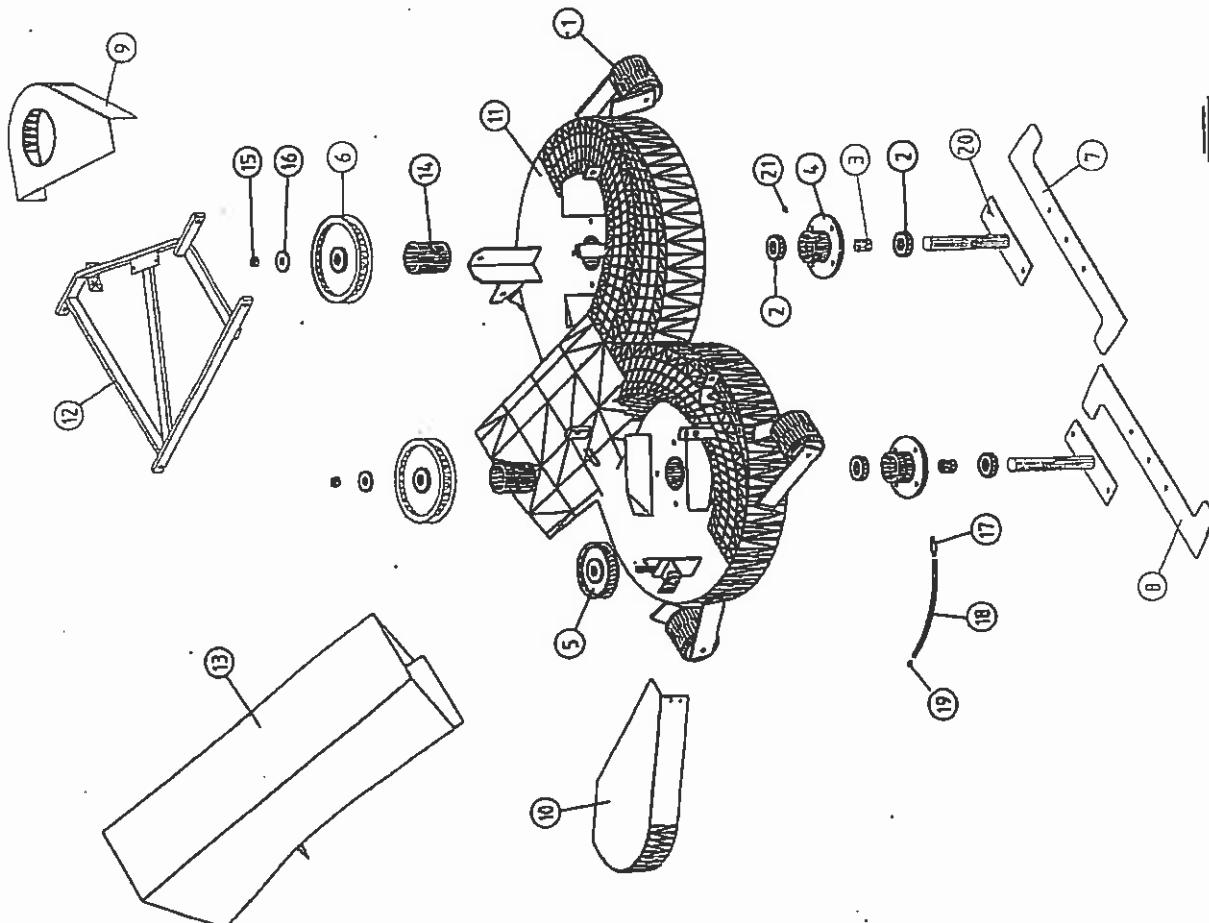

© 2000 KENNY CO.

Deck Assy - RD1040

20/03/00

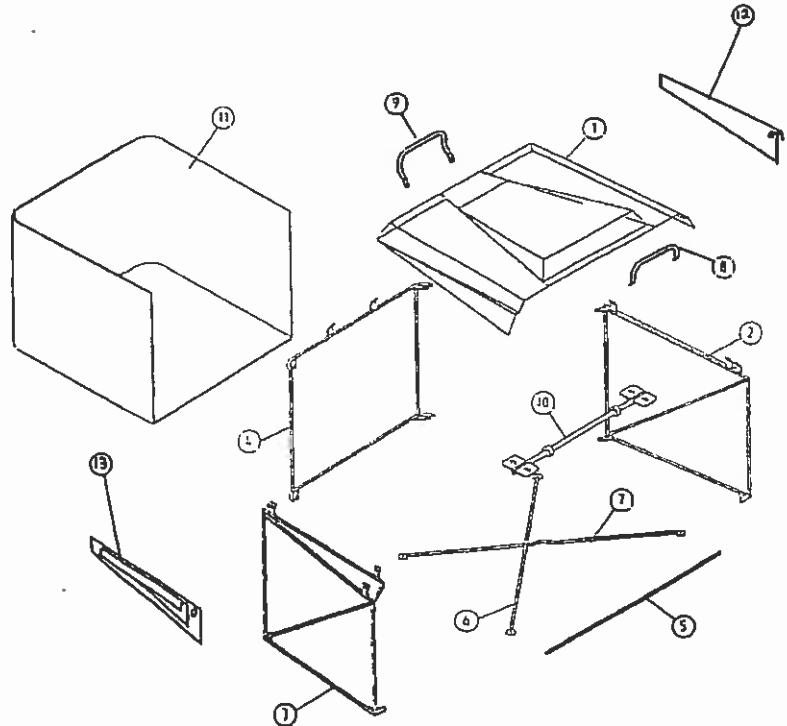

LYNX PARTS LIST – CATCHER KIT ASSY

1	502253	Top – Catcher Assy	1
2	502254	LH Frame	1
3	502255	RH Frame	1
4	502256	Back Frame	1
5	502208	Front Cross Member	1
6	502258	Straight Brace	1
7	502259	Cross Brace	1
8	502158	Front Handle	1
9	502159	Rear Handle	1
10	502238	Catcher Mount Shaft	1
11	502203	Catcher Bag	1
12	502308	LH Air Deflector	1
13	502309	RH Air Deflector	1
	502230	Decal – Top Catcher Rear	1
	502225	Decal – Catcher LH	1
	502226	Decal – Catcher RH	1

HARDWARE

750111	Screw – Set Hex M6 x 12 zp	2
750112	Screw – Set M6 x 16 zp	4
502124	Screw – Button Head M8 x 16 zp	8
500436	Screw – Button Head M8 x 20 zp	4
502105	Screw – Button Head M8 x 25 zp	2
750102	Nut – Nyloc M8 zp	14
750101	Nut – Nyloc M6 zp	6
750156	Washer – Flat M8 x 21 zp	10
750103	Screw – Grub 5/16" x 3/8"	2
502269	Ties – Cable J355-T30R-W	2

