

Savannah Catcher Bag Assembly



Top ZTS193

Middle, Two holes in the centre on the r/h side ZTS217

Bottom, Tag on r/h side ZTS192

Plug into front frame ZTS212



Air flow divider has an arrow to mark the top ZTS221

Handles 502158

6x20 bolts to hold top handle



Catcher bag
ZTS194

6x40 bolts
to hold
back
handle

Corner protectors ZTS365

Bag protector bottom rear
ZTS289




Bag protection top
ZTS366


Bag protector bottom L/H
ZTS284

Bag protector bottom R/H
ZTS285

Shows where cable ties go to close up gap in bag

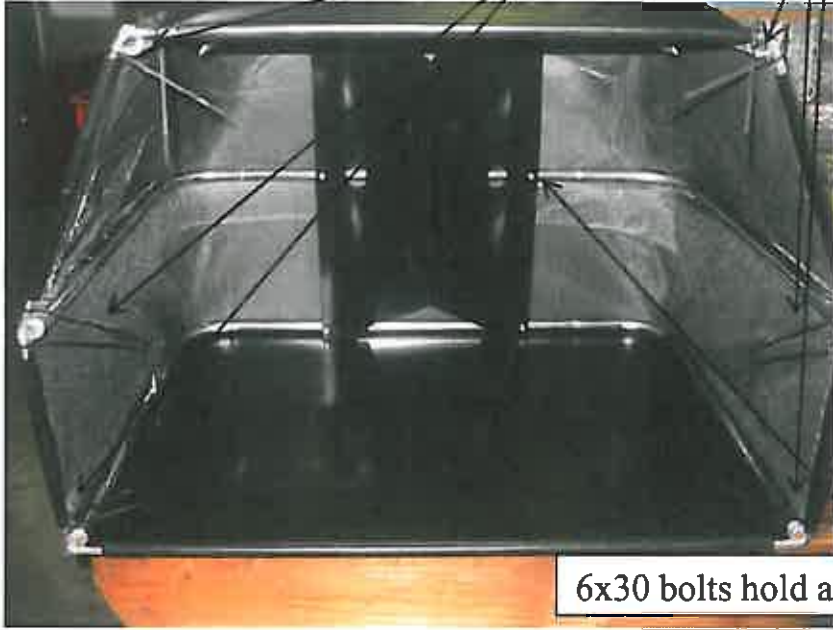

6x30 bolts hold air flow divider on

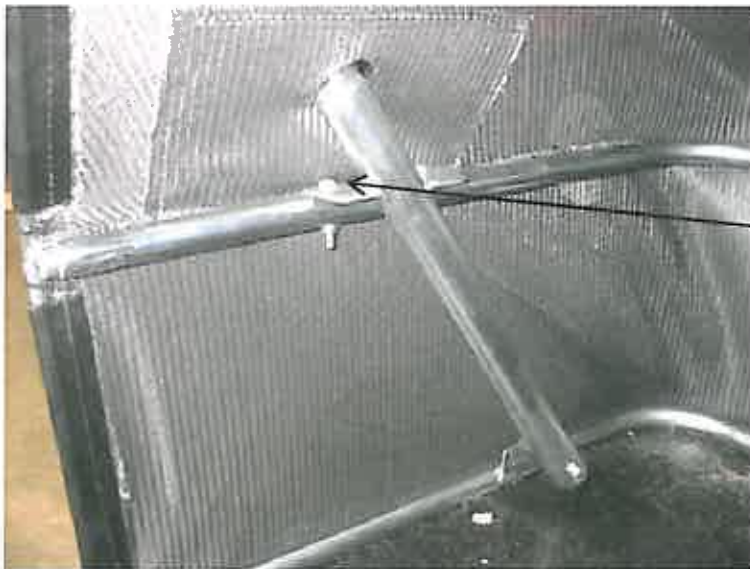

6x30 bolts

Assembly instructions for Savannah catcher bag

1. Place ZTS212 on flat surface with pins pointing upwards
2. Place ZTS193 onto top pins
3. Place ZTS192 on bottom two pins with lug pointing to the top frame
4. Place ZTS217 on middle two pins
5. Bolt ZTS221 onto the back of the three frames
6. Fit the catcher bag on to the frame
7. Place handle assembly made up of ZTS218 & ZTS219 through hole in catcher bag—from the inside
8. Fit nuts and bolts to secure handle
9. Using a soldering iron burn holes through catcher bag—through ZTS193 to line up holes fit top handle 502158
10. Burn holes in back of ZTS217 lining up holes, then fit other handle 502158
11. Use cable ties where necessary to close up gaps where bag attaches to ZTS212 frame.
12. Then fit protector kit.